

mitreForma™



The MITREFORMA™ is a fabrication tool designed specifically for creating mitred fascias in a quick, precise and fool proof way.

Features:

- Fast →
- Simple to use →
- Built-in square →
- Fascia clamping rod →
- Fascia retaining arm →
- Disposable glue-catcher →
- High-quality aluminium & stainless steel construction →
- White rubber plate →
- Quick release mechanism →

Benefits:

- Cuts preparation time by 75%
- Saves labour costs
- Creates high-quality 90° seams
- Ensures tight seams
- Ensures accurate alignment
- Protects tool from glue overrun
- Long lasting investment
- Protects surface of stone
- Fast operation

Available in two sizes:

- Up to 130mm fascias
- 120 – 320mm fascias

ACCEPT NO IMITATION, INSIST ON THE GENUINE MITREFORMA™



Mitreforma™ is proudly endorsed by Caesarstone®
This product is protected by all relevant patent & registered design applications




Quick Release




Fascia Retaining Arm



Disposable Glue Catcher

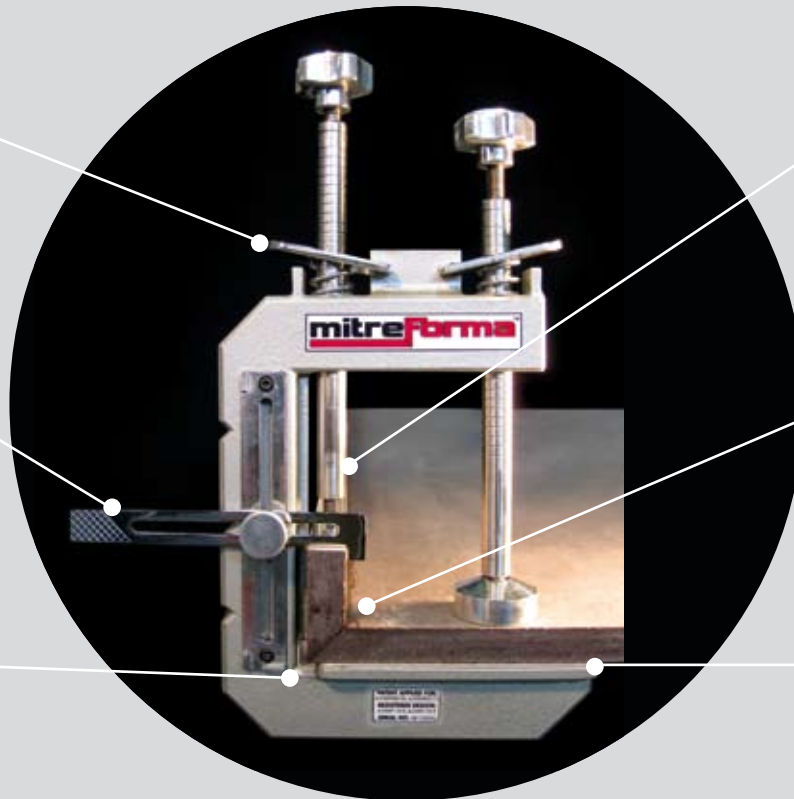

Fascia Clamping Rod

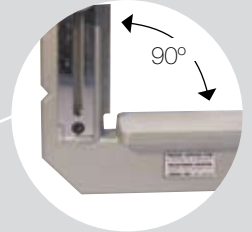

Built In Square



White Rubber Base Plate



CDK STONE
AUSTRALIA

CDK Stone Pty Ltd

ABN 52 104 900 647
enquiries@cdkstone.com.au

www.cdkstone.com.au

Melbourne - Head Office

4 - 6 Freighter Road
Moorabbin, VIC 3189
Tel (03) 8552 6000
Fax (03) 8552 6001

Sydney

20 Yulong Close
Moorebank, NSW 2170
Tel (02) 9822 5155
Fax (02) 9822 5166

Gold Coast

26 Wrights Place
Labrador, QLD 4207
Tel (07) 5537 3222
Fax (07) 5537 3444

Perth

Unit 3 / 5 Mulgool Road
Malaga, WA 6090
Tel (08) 9248 3533
Fax (08) 9248 9122

STEP BY STEP INSTRUCTIONS FOR USE



Insert glue-catcher in the rebate of the mitreForma™



Place mitreForma™ in position using the quick-release rod, then screw until finger-tight



Place the fascia in position and ensure it is correctly aligned



Use the retaining arms to ensure fascia is held firmly against the back guide



Use the fascia clamping rods to press the fascia into place. **DO NOT** over-tighten!



Check that all main clamping rods are firm and all the seams are correctly aligned



Excess glue can be easily removed once it is sufficiently firm



Once the glue has set, release the retaining arms



Unscrew the fascia clamping rods, then press the quick-release tab and retract the rod



Unscrew the main clamping rod, then press the quick-release tab to lower and remove the mitreForma™

Tips:

- Glue can be applied to the stone before the mitreForma is placed in position
- A dry-run can be useful for complicated jobs to ensure all pieces align correctly
- **DO NOT** press quick-release tabs while clamping rods are under pressure
- **DO NOT** over-tighten either of the clamping rods
- Glue-catcher should be replaced after each use